

## SERVICES

USER  
INFORMATIONNETWORK  
TECHNOLOGIESGOES-7  
SATELLITEREPORTS ON  
GOES-7TECHNICAL NOTES  
ON GOES-7PEACESAT  
EARTHSTATION

ISDN

DEDICATED  
LINKS IN THE  
PACIFIC REGIONINTERNET  
ACCESS

## ◀ TECHNICAL NOTES ON GOES-7 ▶

**Spacecraft System Characteristics**

Launch Date: 02/87

Launch Vehicle: Delta 3914

Orbit: Geostationary

Longitude: -175°W +/- 3°

Inclination: 7.78°

Primary Uplink Frequency: S-Band

Primary Downlink Frequency: L-Band

Transponder Bandwidth: 8.2MHz

Redundant On-board Spacecraft Electronic Systems

Primary Power Source: Solar

**Spacecraft Station Keeping**

GOES-7 circles the earth in a geosynchronous orbit, which means it orbits the equatorial plane of the earth at a speed matching the earth's rotation. This allows it to hover continuously over one general position on the surface. The geosynchronous plane is about 35,800 km (22,300 miles) above the earth. At this altitude, a wide communication footprint area can be obtained.

The spacecraft is maintained at -175°W +/- 3°. East/West command maneuvers are issued twice a year to GOES-7 by NASA KPGO. This window provides a full coverage area to the PEACESAT Network of sites in the Pacific Basin.

**Eclipse Episodes**

GOES-7 uses the sun's solar rays as its primary power source. There are solar panels that convert solar energy to electrical energy. Eclipse episodes happen when the moon comes in between the sun's solar rays and GOES-7's solar panels. This will cause a temporary shut down of systems that varies from 5min to an hour. After the improper shutdown of GOES-7's systems, the spacecraft comes up in a failed state. With the Navigational Engineering support by NOAA, there is a joint responsibility of NASA at the Kokee Park Geophysical Observatory & PEACESAT Headquarters to properly initialize GOES-7.

Eclipse episodes occur twice a year for duration of about one and a half months. PEACESAT Operations at this time are cut down to 12 hour days. Most PEACESAT sites do not get affected by this due to the 12 hour window being during the normal business hours.


**Tracking of Spacecraft**

PEACESAT uses three means of reference in tracking GOES-7

- STSPlus Tracking Software using NORAD Two-Line Elements (TLE)
  - o Free Tracking Software Download: <http://www.dransom.com/stsplus.html>
  - o Current NORAD TLE's: <http://celestrak.com/NORAD/elements/goes.txt>
  - o Provides navigational information in GOES-7



# NORAD TWO-LINE ELEMENT

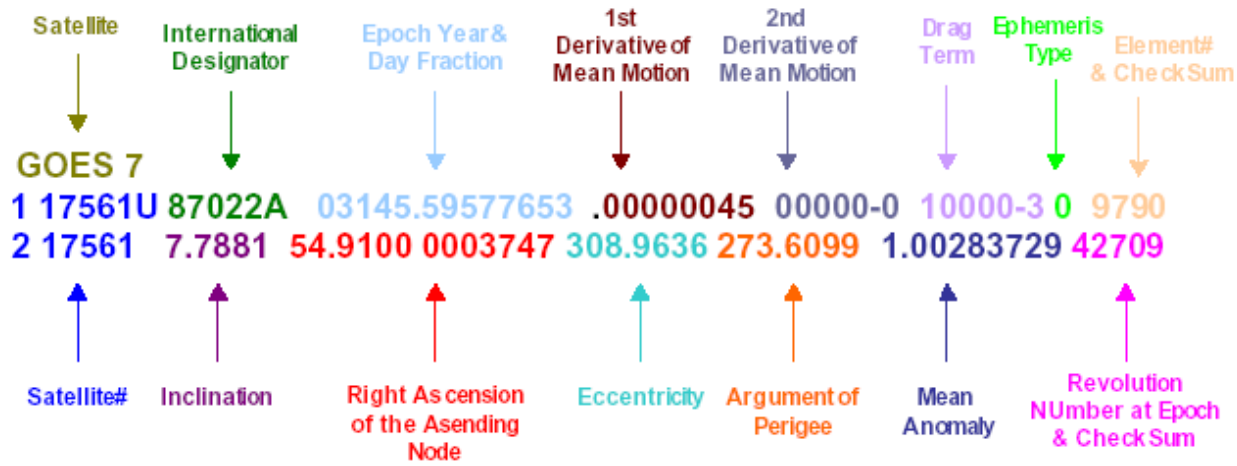

- NASA Tracking Data
  - o Distributed to PEACESAT Headquarters by NASA KPGO monthly
  - o Used for Engineering purposes by PEACESAT Headquarters

## GOES-7

DATE TIME SUBPOINT

YYMMDD HHMMSS LATS LONGS

30506 0 1.39S 178.95W	30506 80000 7.28N 178.89W	30506 160000 5.94S
30506 3000 0.39S 179.02W	30506 83000 6.87N 178.85W	179.34W
30506 10000 0.63N 179.08W	30506 90000 6.34N 178.82W	30506 163000 6.54S
	30506 93000 5.70N 178.81W	179.31W
30506 13000 1.63N 179.14W	30506 100000 4.97N	30506 170000 7.03S
	178.82W	179.27W
30506 20000 2.60N 179.20W	30506 103000 4.15N	30506 173000 7.40S
	178.85W	179.21W
30506 23000 3.53N 179.25W	30506 110000 3.26N	30506 180000 7.63S
	178.89W	179.14W
30506 30000 4.40N 179.28W	30506 113000 2.32N	30506 183000 7.74S
	178.94W	179.07W
30506 33000 5.20N 179.29W	30506 120000 1.33N	30506 190000 7.71S
	179.00W	178.99W
30506 40000 5.90N 179.29W	30506 123000 0.33N	30506 193000 7.55S
	179.07W	178.92W
30506 43000 6.51N 179.27W	30506 130000 0.69S	30506 200000 7.25S
	179.14W	178.86W
30506 50000 7.00N 179.24W	30506 133000 1.69S	30506 203000 6.83S
	179.20W	178.81W
30506 53000 7.37N 179.19W	30506 140000 2.66S	30506 210000 6.30S
	179.26W	178.77W
30506 60000 7.62N 179.14W	30506 143000 3.59S	30506 213000 5.65S
	179.30W	178.75W
30506 63000 7.73N 179.07W	30506 150000 4.45S	30506 220000 4.91S
	179.33W	178.75W
30506 70000 7.71N 179.01W	30506 153000 5.24S	30506 223000 4.09S
	179.34W	178.76W
30506 73000 7.56N 178.95W		30506 230000 3.19S
		178.80W
		30506 233000 2.24S
		178.84W

- PEACESAT Pointing Data
  - o Distributed to all PEACESAT sites by PEACESAT Headquarters monthly
  - o Shows Alignments Times for PEACESAT Sites
  - o [Click for a PDF of the current PEACESAT Pointing Data](#)
  - o [Click for a JPEG of the current PEACESAT Pointing Data](#)

## ◀ TECHNICAL NOTES ON GOES-7 ▶

[HOME](#) | [ABOUT US](#) | [SERVICES](#) | [PROJECTS](#) | [RESOURCES](#) | [HELP](#)

[PRINT VERSION](#) | [TEXT VERSION](#)

[TOP OF PAGE](#)

University of Hawaii at Manoa • 2424 Maile Way • Saunders Hall Room 713 • Honolulu, Hawaii 96822

Tel: (808) 956-8848 • Fax: (808) 956-8019 • Email: [peacesat@elele.peacesat.hawaii.edu](mailto:peacesat@elele.peacesat.hawaii.edu)